




FLEXICAP 4-20 LOOP POWERED CAPACITANCE TRANSMITTER

Wiring Diagram for Flexicap 4-20 Unit Using a Type 800 Dual Trip Amplifier,
See Type 800 and Flexicap 4-20 Installation and Setting up Instructions.

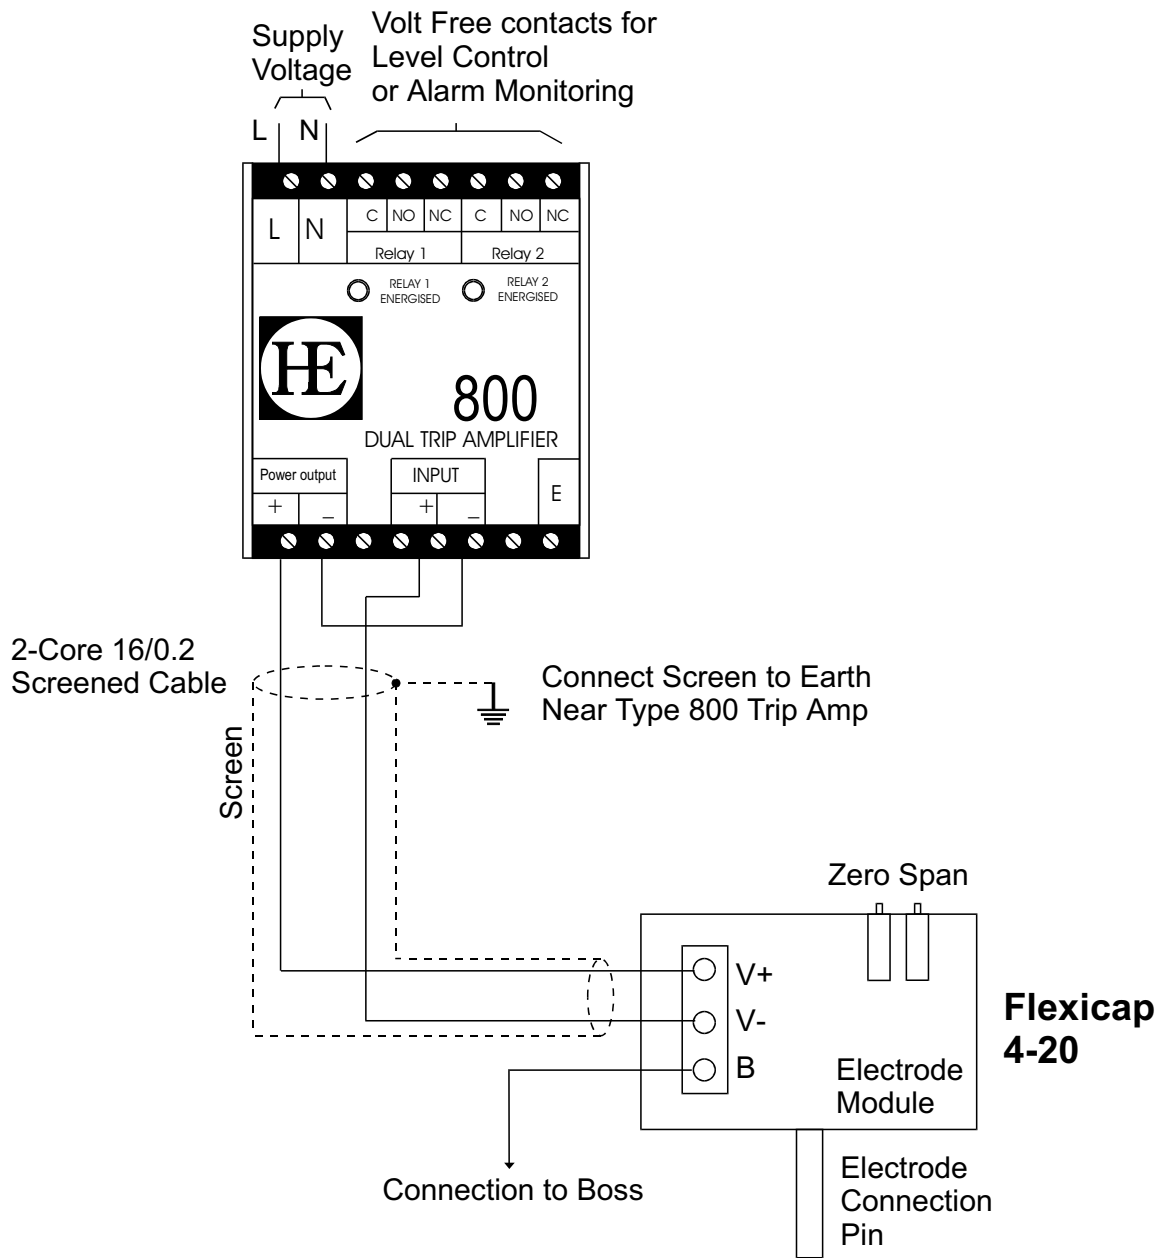

This product has been designed and complies to the relevant standards as listed in its certificate of conformity, The installer/user must ensure system compliance

Because of continuing development we reserve the right to change the specifications without notice.

HAWKER ELECTRONICS LTD.

57, The Avenue,
Rubery Industrial Estate,
Birmingham B45 9AL, ENGLAND
Telephone : +44(0)121-453-8911 Fax : +44(0)121-453-3777
E Mail: info @ hawker-electronics.co.uk.



FM 10000



W D 26
D428.CDR
Issue B
Feb 02