




PRESSURE TRANSMITTER / IS / FLEXILEVEL 2

Wiring diagram for Intrinsically Safe pressure transmitters type PTX1830/IS, PTX530/IS and type PTX510/IS used with Flexilevel 2 level indicator/controller. To be read in conjunction with Flexilevel 2 installation and setting up instructions.

For Level control, or High or Low Level Alarm Monitoring

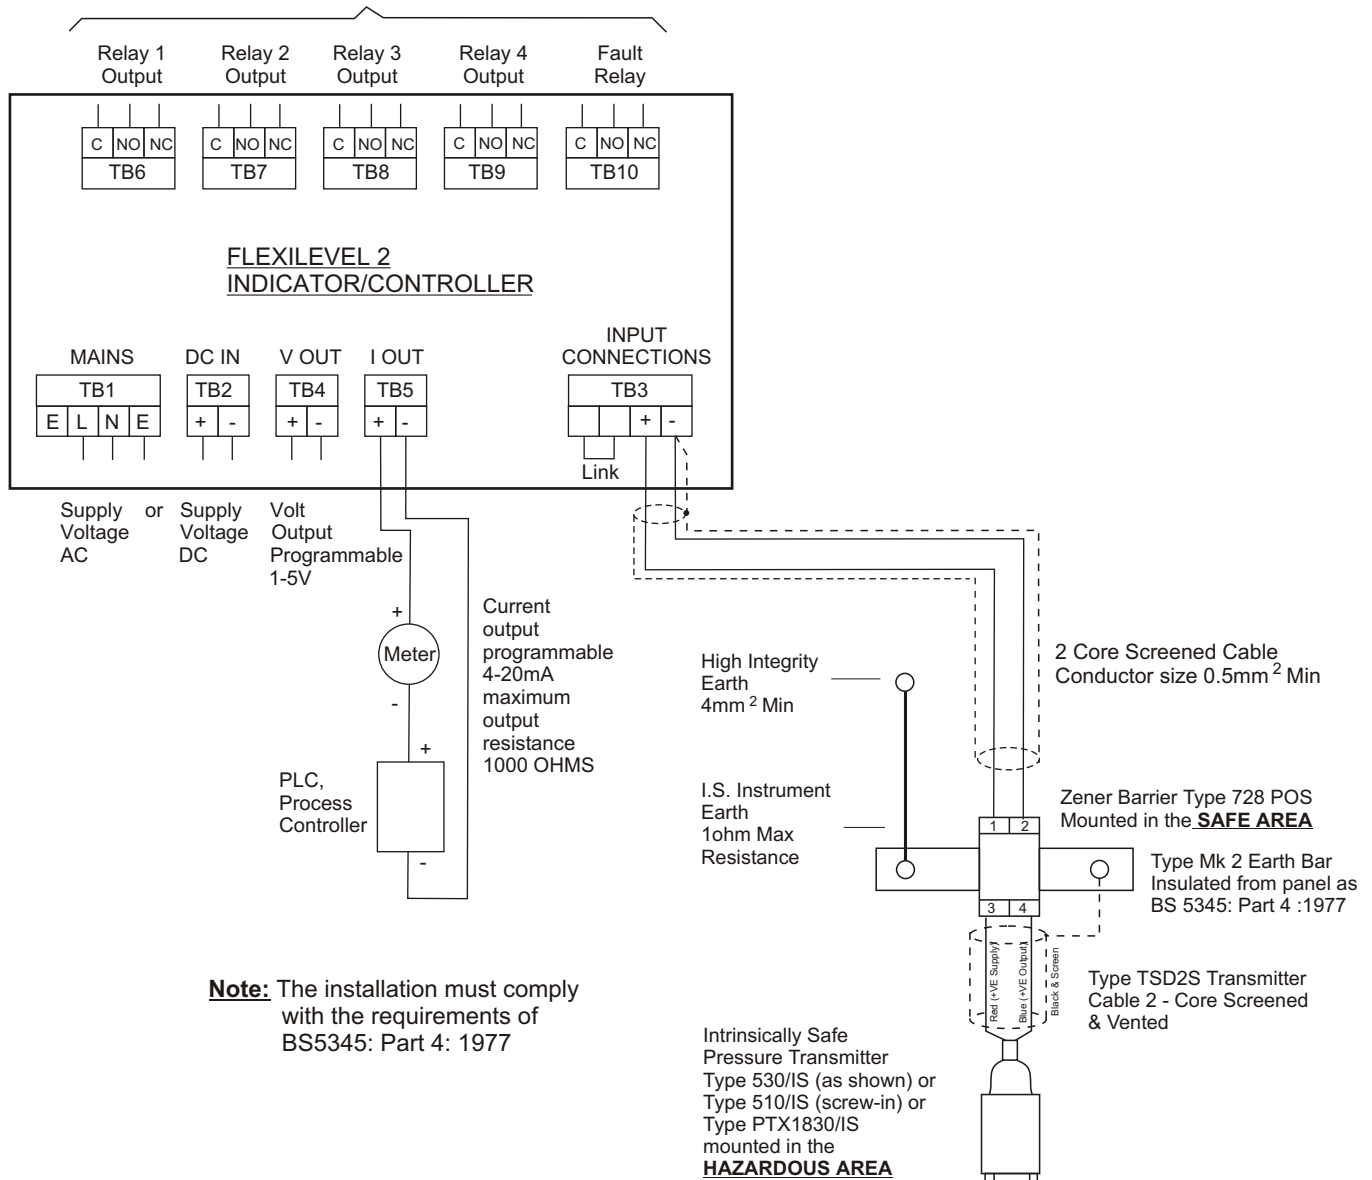

This product has been designed and complies to the relevant standards as listed in its certificate of conformity. The installer/user must ensure system compliance Because of continuing development we reserve the right to change the specification without notice

HAWKER ELECTRONICS LTD

57, The Avenue,
 Rubery Industrial Estate,
 Birmingham, B45 9AL, England
 Telephone :+44(0)121-453-8911 Fax: +44(0)121-453-3777
 E.mail: info@hawker-electronics.co.uk



W D 59
 B.D. D699.cdr
 Issue B
 Feb 02

FM 10000