




Signal Conditioner Type 990

Application Wiring Diagram for Pressure Transmitters Type PTX1830/D, PTX1830/¼ and PTX530 be read in conjunction with Type 990 Installation and Setting up Instructions

Red (+ VE Supply)
Blue (-VE Output)

Note
Connect Screen Wire to Earth at Signal Conditioner ONLY

Type TSD2S Transmitter Cable 2-Core Screened & Vented.
Note Vent Tube must be allowed to Vent to Atmosphere

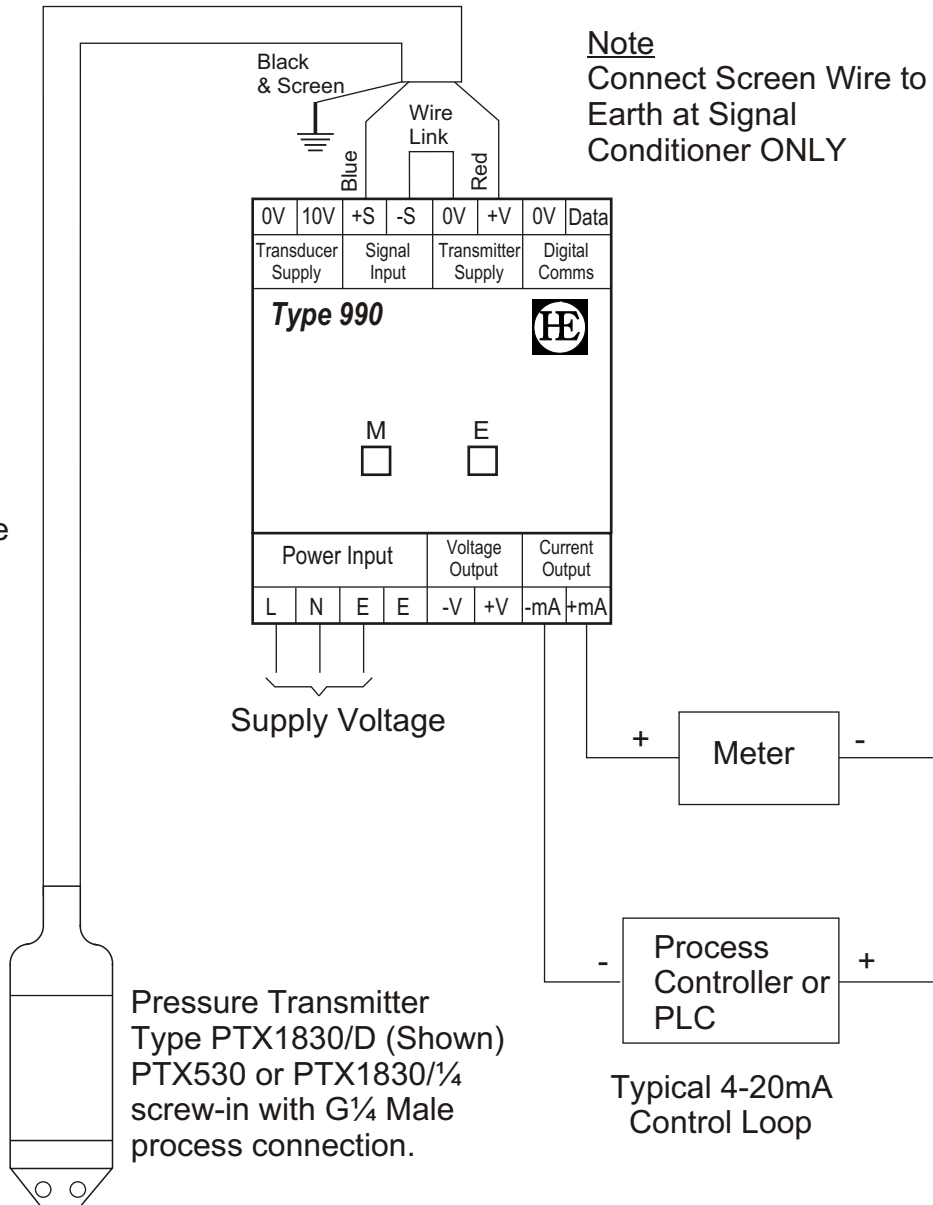

Pressure Transmitter Type PTX1830/D (Shown) PTX530 or PTX1830/¼ screw-in with G¼ Male process connection.

Typical 4-20mA Control Loop

This product has been designed and complies to the relevant standards as listed in its certificate of conformity. The installer/user must ensure system compliance Because of continuing development we reserve the right to change the specification without notice

HAWKER ELECTRONICS LTD

57, The Avenue,
Rubery Industrial Estate,
Birmingham, B45 9AL, England
Telephone :+44(0)121-453-8911 Fax: +44(0)121-453-3777
E.mail: info@hawker-electronics.co.uk



FM 10000



W D 68
Issue A
Nov 04
D890.cdr